

User Instruction SRG Type 54X/59X Indicator Regulator

Connecting the Regulator:

- Before connecting the regulator to the cylinder valve turn the control knob to the "Off" position by turning it fully clockwise.
- Hold the regulator in both hands, lift the black locking device and place the regulator firmly onto the cylinder valve.
- Push the black locking device firmly down or press firmly on the top of the regulator until there is an audible click.
- Make sure the regulator is securely engaged on the cylinder valve by trying to lift the regulator upwards. Repeat the process if you are not sure.
- To operate the regulator turn the control knob to the "On" position by turning it fully anticlockwise.
- Always turn the control knob to the "Off" position after use!!!
- To disconnect the regulator from the cylinder valve, turn the lever into the OFF position, then lift the locking device and remove the regulator.

⇒ Reserve Indication:

Read the Reserve Indicator:

(* It is read while gas is flowing through the system)

- (1) turn OFF all appliances & connect the regulator
- (2) turn ON the regulator & appliances - read the Indicator...



...there is sufficient gas in your cylinder. **USE** ✓

LEAK CHECK = NOTE the pointer position on the dial face

...there is a reserve of 10-15 min. in your cylinder. **REFILL** ✓

⇒ Leak Testing Device:



Pressurize the Installation:

(* New installations or in case of exchange of cylinder / regulator / hose)

- (1) turn all appliances OFF & connect the Regulator
- (2) turn ON the Regulator for 5 sec. and turn it OFF again

(NOTE: The Pointer will indicate that the system has been pressurized - green area)

Check the Installation:

(* To guarantee the safety of your complete installation)

- (3) remember the indicator position & re-check again after 10 min.
- (?) in case the indicator has moved = **DISCONNECT YOUR REGULATOR**

(NOTE: If a leak has been detected = **CONTACT YOUR GAS SUPPLIER** for support)



Before installing – Safety advice:

- The regulator is designed for use with Propane, Butane or any mixture of these gas-types.
- When the device is to be used outdoors, it shall be positioned or protected against direct penetration by any trickling water.
- There are no tools required to connect the regulator to the valve.
- Make sure that the consumer seal on the valve is in good condition.
- Make sure that all switches and appliances are turned off.
- Do not change LP gas cylinders in the presence of open lights or flames.
- Use LP gas cylinders in upright position only.
- Make sure that the installed flexible gas tubing is still in good condition; not more than 3 years old.

